



- ✓ Synthetic flashing is required on all exterior wood columns with decorative capitals or any split capital.
- ✓ Never block column ventilation with flashing.
- ✓ Install flashing on the side of the soffit and capital that is exposed to the elements. The flashing begins 1" from the bottom of the soffit and continues down to the capital, turns across the top of the capital and folds over  $\frac{1}{2}$ " down the top edge of the capital. Flashing is required on two sides of the soffit and capital exposed to the elements when a column is installed at a corner.